

Instructions for Disinfectant Mats



Set up

- Place black absorbent pad inside blue waterproof sleeve
- Place mat where it is to be used on a level surface
- Use the table below to work out how much solution you will need
- Pre mix disinfectant or foot care product to required strength
- Pour gently over black absorbent pad
- Fill pad until it is saturated and liquid appears when you lightly put your foot on the pad, leave for 5 minutes and top up

Mat Dimensions	Mat Use	Capacity	Top Up
60 x 90 x 4 cm	Personnel disinfection	10 to 15 litres	As required
230 x 47 x 4 cm	Sheet foot care	25 to 30 litres	Every 150 to 200 sheep passes
180 x 90 x 4 cm	Personnel disinfection	45 to 60 litres	As required
180 x 90 x 4 cm	Cattle foot care	45 to 60 litres	Every 75 to 85 cow passes
4 x 180 x 90 x 4 cm	Vehicle disinfection	45 to 60 litres / mat (180 to 240 litres in total)	As required

Use

- Do not rush animals over the mat—sheep will follow head to tail once started
- Vehicles should drive over the mats at no more than 5 mph


Maintenance

- Top up as required and replenish within effective active time of disinfectant or care product
- Fully clean mat and replenish every week for best results

After use

- Dispose of contents safely
- Remove black pad from sleeve and hose thoroughly and allow to dry
- Store when not in use in a dry area
- The effectiveness of your treatment or care product will diminish if left in a dirty mat.

Instructions for Vehicle Disinfection

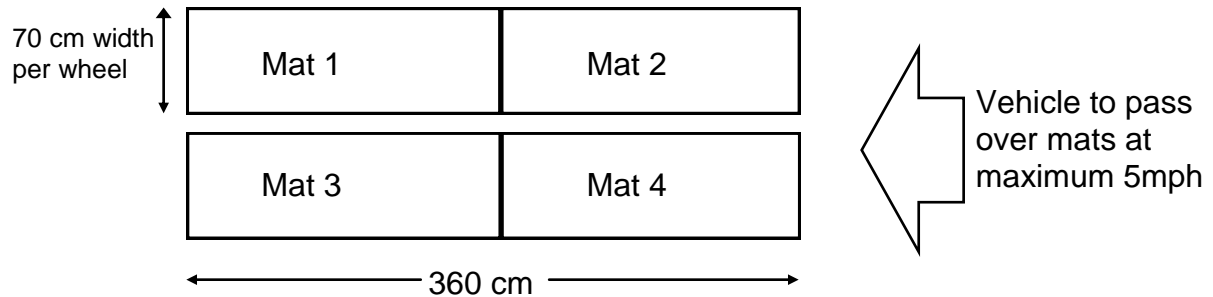

To disinfect lorries, vans or cars:

- Arrange four mats as shown in the diagram
- Blue sleeves can be trimmed by up to 10cm to give additional width if necessary
- Follow the set up and use instructions shown overleaf
- Vehicles must not exceed 5 mph when driving over mats

Any questions phone us on 01327 300 395

Buy your mats online at www.intershape.com/mats.htm

Intershape Ltd

2, Baird Close, Drayton Fields Ind Est Daventry, NN11 8RY

Tel: 01327 300 395

Email: info@intershape.com Web: www.intershape.com